



PRODUCT MANUAL
QO GRAVA

INDEX

SAFETY INSTRUCTIONS

SAFETY WARNINGS FOR GRAVA

WHAT DO YOU NEED?

ASSEMBLY TOOLS

GRAVA ASSEMBLY

STEP BY STEP INSTALLATION

SPACER CHART

SPACERS NEEDED

QO BIKE GEAR S.L.

DESIGNED IN SPAIN

28036 MADRID

2025

info@qobike.com


CRAFTED WITH THE FINEST
CARBON FIBER.

SAFETY WARNINGS FOR GRAVA

WARNING: Incorrect installation or use of QO Bike Gear products may result in serious injury or death. Read and follow all installation and usage instructions carefully before use. Ensure that all bolts and fastenings are correctly torqued to the manufacturer's specified settings. Regularly inspect the product for signs of wear, damage, or fatigue before each ride.


Always use the recommended torque settings for installation. Do not over-tighten bolts, as this may cause material failure.

CAUTION: Regularly inspect this product for cracks, deep scratches, or delamination. Do not use if any structural defects are present. If signs of wear, weakness, or damage are detected, replace the product immediately. Failure to maintain or replace worn components may result in sudden component failure and loss of bicycle control, leading to potential injury or accidents.

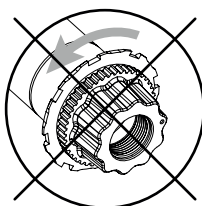


Do not disassemble.

No desmontar.
Ne pas démonter.
Nicht zerlegen.
Non smontare.
请勿拆卸。

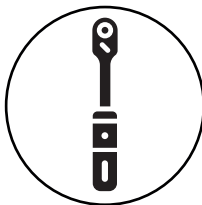

Use torque wrench to install.


Use una llave dinamométrica para instalar.
Utilisez une clé dynamométrique pour l'installation.
Verwenden Sie zum Installieren einen Drehmomentschlüssel.
Utilizzare una chiave dinamometrica per l'installazione.
安装时请使用扭力扳手。

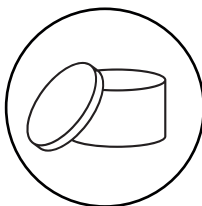

Use assembly paste.

Use pasta de montaje.
Utilisez de la pâte de montage.
Verwenden Sie Montagepaste.
Utilizzare pasta di montaggio.
使用装配膏。

ASSEMBLY TOOLS

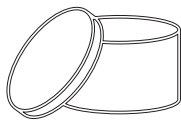

ASSEMBLY
PASTE







1.5mm




8mm

PARTS

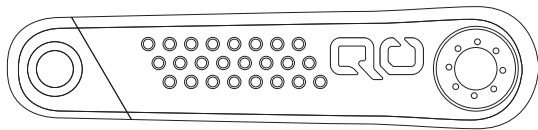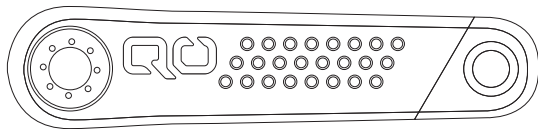
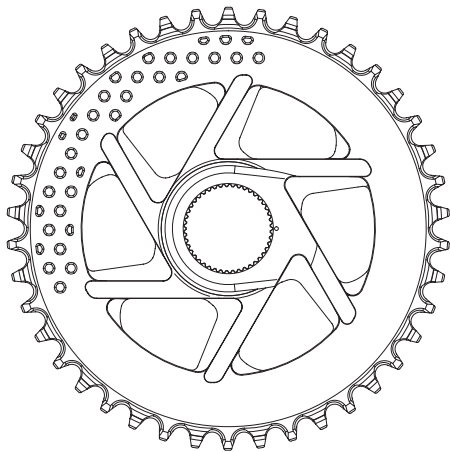


STEP BY STEP INSTALLATION


1

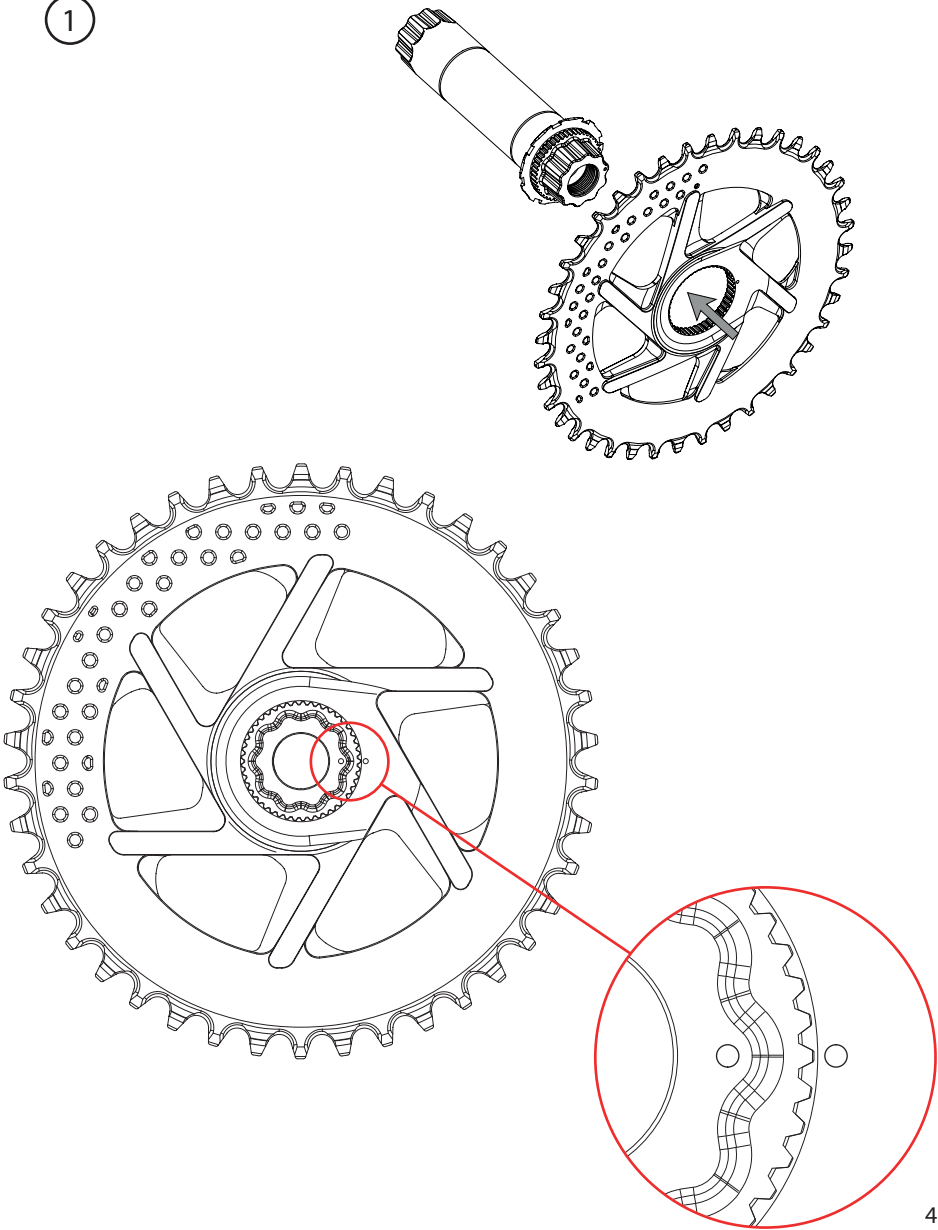


2

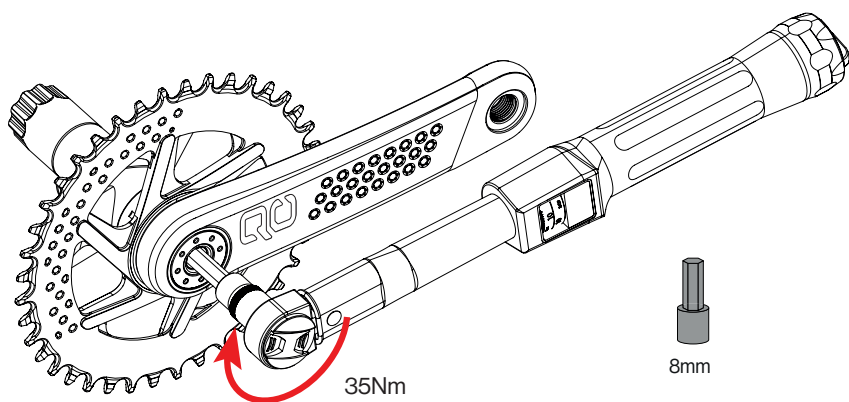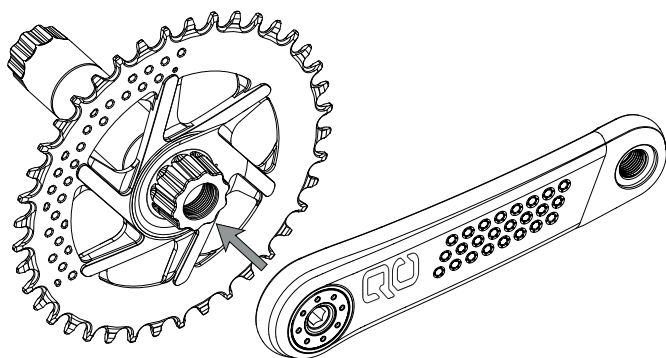

3

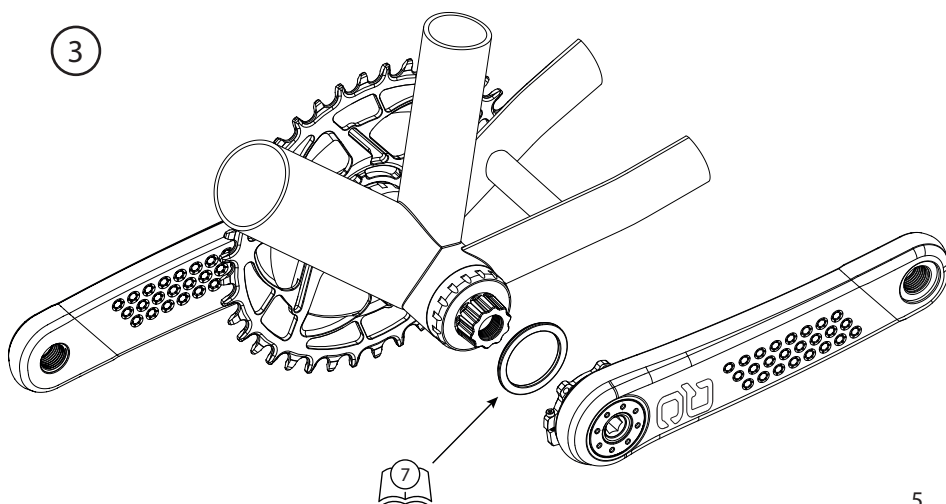

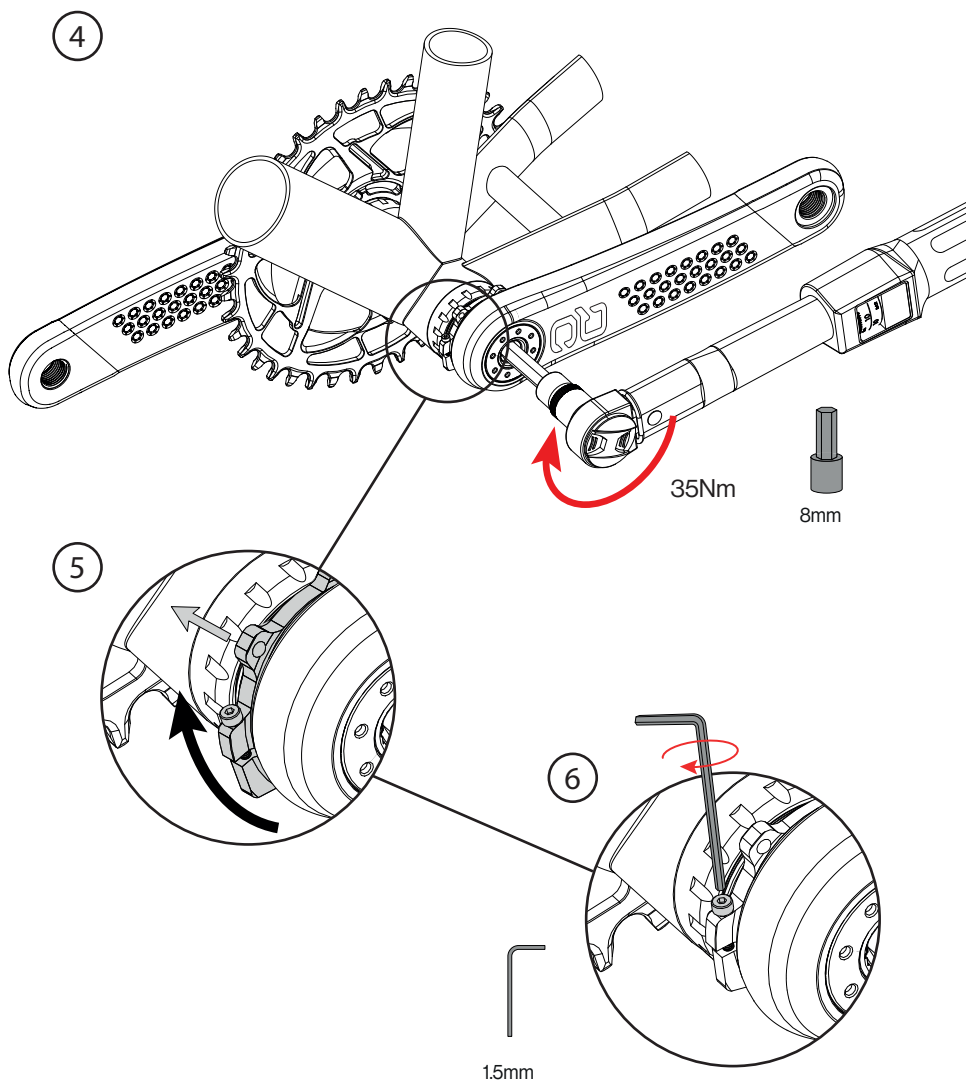

SPACERS NEEDED

Spacers may vary depending on the bottom bracket used.

SRAM DUB® BBs

Frame	Frame Diameter	Frame Width	BB Recommendation	Left Side Spacer	Right Side Spacer
BSA 68	Thread 1.37"x24TPI	68 mm	SRAM® DUB BSA 68/73	2 mm	-
Italian	Thread 36mm x 24T	70 mm	SRAM® DUB Italian 70	2 mm	-
PressFit 86.5	41 mm	86.5 mm	SRAM® DUB PressFit 86.5	2 mm	-
BB30 68	42 mm	68 mm	SRAM DUB BB30 68/73	2 mm	-
PressFit 30 68	46 mm	68 mm	SRAM DUB PressFit 30 68/73	2 mm	-
PressFit 30 79-A	46 mm	79 mm	SRAM DUB PressFit 30 79-A	-	-
BB386	46 mm	86.5 mm	SRAM DUB BB386	-	-
T47 68	Thread 47x1.0 mm	68 mm	SRAM DUB T47 68	2 mm	-
T47 85.5	Thread 47x1.0 mm	85.5 mm	SRAM DUB T47 85.5	2 mm	-



www.qobike.com