



PRODUCT MANUAL  
**QO RACE**

# INDEX

SAFETY INSTRUCTIONS

## **SAFETY WARNINGS FOR RACE**

WHAT DO YOU NEED?

## **ASSEMBLY TOOLS**

RACE ASSEMBLY

## **STEP BY STEP INSTALLATION**

SPACER CHART

## **SPACERS NEEDED**

**QO BIKE GEAR S.L.**

DESIGNED IN SPAIN

28036 MADRID

2025

[info@qobike.com](mailto:info@qobike.com)


CRAFTED WITH THE FINEST  
CARBON FIBER.

## SAFETY WARNINGS FOR RACE

**WARNING:** Incorrect installation or use of QO Bike Gear products may result in serious injury or death. Read and follow all installation and usage instructions carefully before use. Ensure that all bolts and fastenings are correctly torqued to the manufacturer's specified settings. Regularly inspect the product for signs of wear, damage, or fatigue before each ride.


Always use the recommended torque settings for installation. Do not over-tighten bolts, as this may cause material failure.

**CAUTION:** Regularly inspect this product for cracks, deep scratches, or delamination. Do not use if any structural defects are present. If signs of wear, weakness, or damage are detected, replace the product immediately. Failure to maintain or replace worn components may result in sudden component failure and loss of bicycle control, leading to potential injury or accidents.

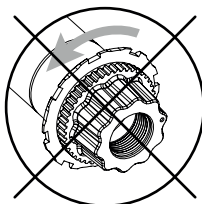


**Do not disassemble.**

No desmontar.  
Ne pas démonter.  
Nicht zerlegen.  
Non smontare.  
请勿拆卸。

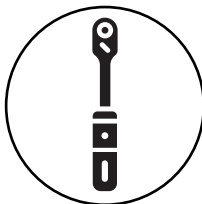

**Use torque wrench to install.**


Use una llave dinamométrica para instalar.  
Utilisez une clé dynamométrique pour l'installation.  
Verwenden Sie zum Installieren einen Drehmomentschlüssel.  
Utilizzare una chiave dinamometrica per l'installazione.  
安装时请使用扭力扳手。

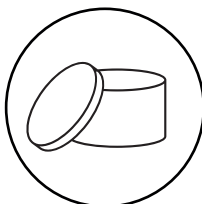

**Use assembly paste.**

Use pasta de montaje.  
Utilisez de la pâte de montage.  
Verwenden Sie Montagepaste.  
Utilizzare pasta di montaggio.  
使用装配膏。

# ASSEMBLY TOOLS

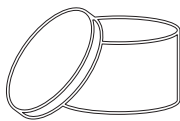

GREASE



1.5mm



6mm







5mm




8mm

# PARTS

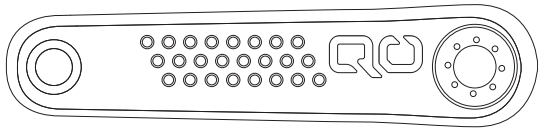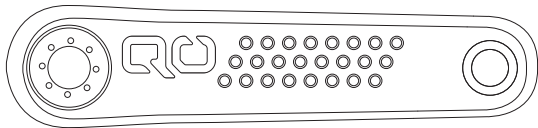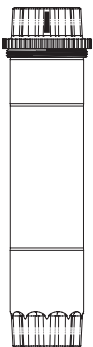
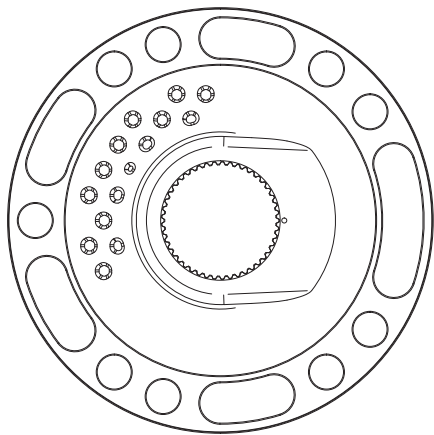


STEP BY STEP INSTALLATION


1

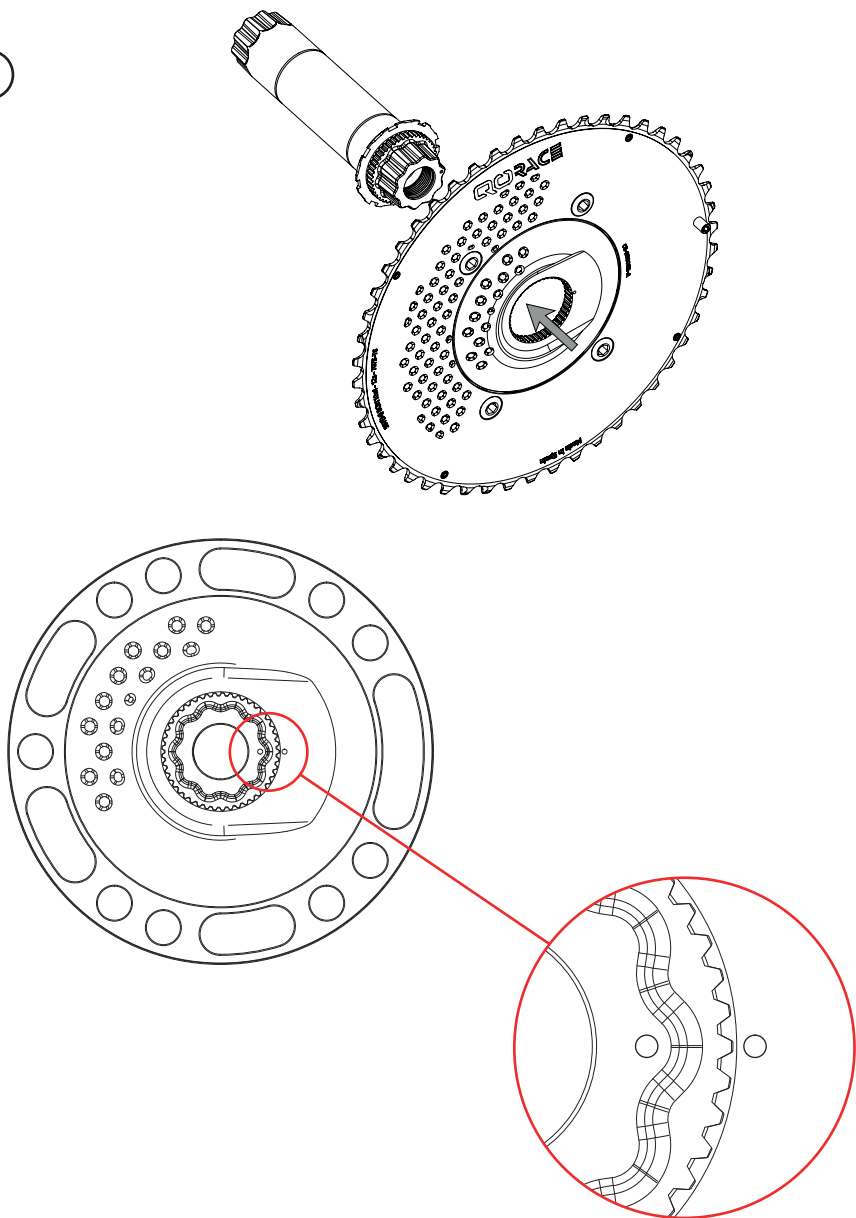


2

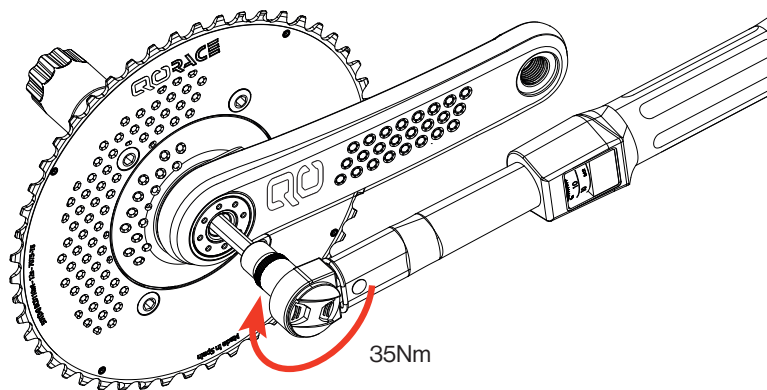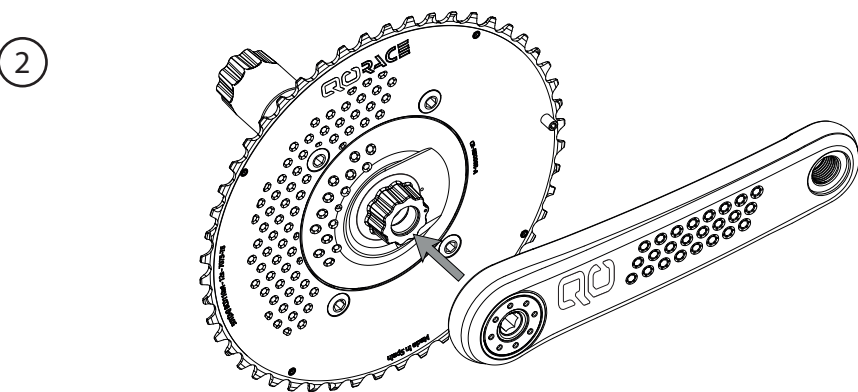

3

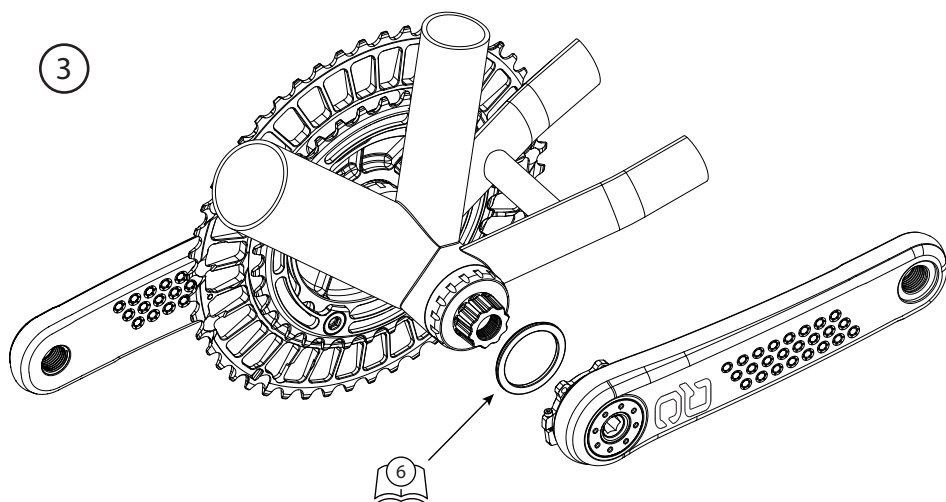

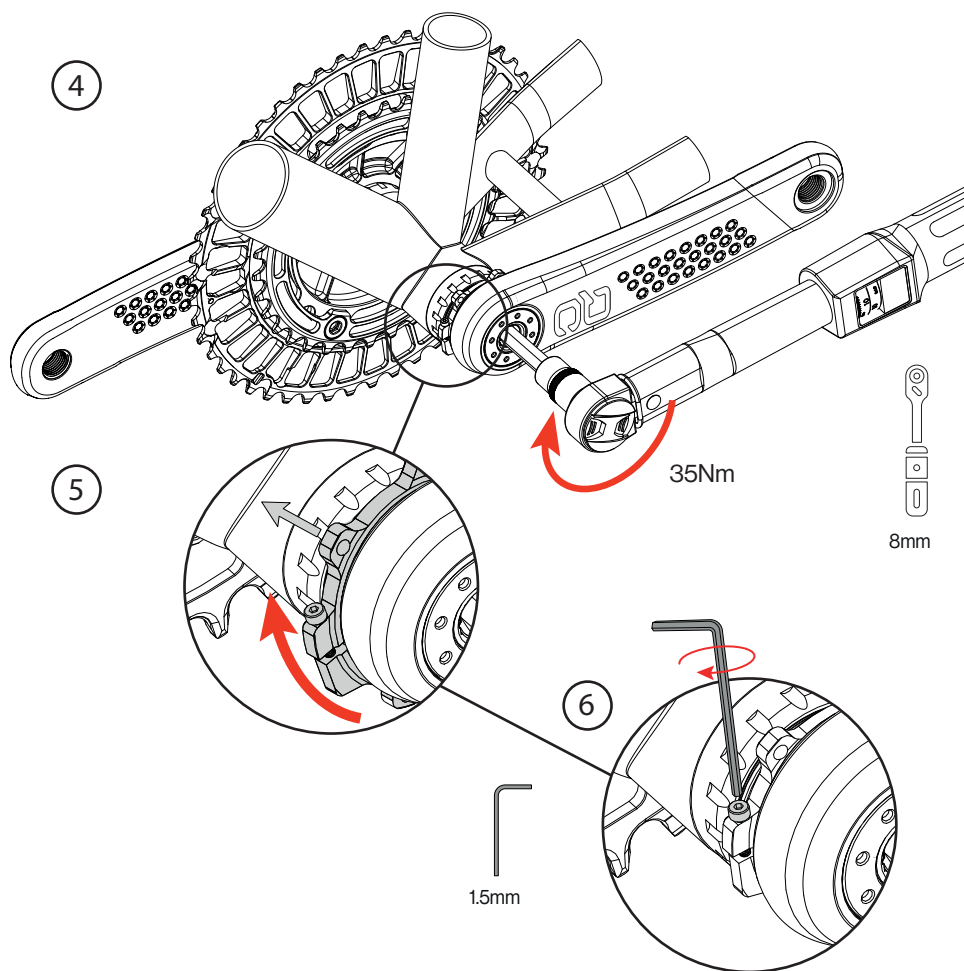

## SPACERS NEEDED

Spacers may vary depending on the bottom bracket used.

### SRAM DUB® BBs

| Frame            | Frame Diameter     | Frame Width | BB Recommendation          | Left Side Spacer | Right Side Spacer |
|------------------|--------------------|-------------|----------------------------|------------------|-------------------|
| BSA 68           | Thread 1.37"x24TPI | 68 mm       | SRAM® DUB BSA 68/73        | 2 mm             | -                 |
| Italian          | Thread 36mm x 24T  | 70 mm       | SRAM® DUB Italian 70       | 2 mm             | -                 |
| PressFit 86.5    | 41 mm              | 86.5 mm     | SRAM® DUB PressFit 86.5    | 2 mm             | -                 |
| BB30 68          | 42 mm              | 68 mm       | SRAM DUB BB30 68/73        | 2 mm             | -                 |
| PressFit 30 68   | 46 mm              | 68 mm       | SRAM DUB PressFit 30 68/73 | 2 mm             | -                 |
| PressFit 30 79-A | 46 mm              | 79 mm       | SRAM DUB PressFit 30 79-A  | -                | -                 |
| BB386            | 46 mm              | 86.5 mm     | SRAM DUB BB386             | -                | -                 |
| T47 68           | Thread 47x1.0 mm   | 68 mm       | SRAM DUB T47 68            | 2 mm             | -                 |
| T47 85.5         | Thread 47x1.0 mm   | 85.5 mm     | SRAM DUB T47 85.5          | 2 mm             | -                 |

QO