



PRODUCT MANUAL
QO ROCKS

INDEX

SAFETY INSTRUCTIONS

SAFETY WARNINGS FOR ROCKS

WHAT DO YOU NEED?

ASSEMBLY TOOLS

RACE ASSEMBLY

STEP BY STEP INSTALLATION

SPACER CHART

SPACERS NEEDED

QO BIKE GEAR S.L.

DESIGNED IN SPAIN

28036 MADRID

2025

info@qobike.com


CRAFTED WITH THE FINEST
CARBON FIBER.

SAFETY WARNINGS FOR ROCKS

WARNING: Incorrect installation or use of QO Bike Gear products may result in serious injury or death. Read and follow all installation and usage instructions carefully before use. Ensure that all bolts and fastenings are correctly torqued to the manufacturer's specified settings. Regularly inspect the product for signs of wear, damage, or fatigue before each ride.


Always use the recommended torque settings for installation. Do not over-tighten bolts, as this may cause material failure.

CAUTION: Regularly inspect this product for cracks, deep scratches, or delamination. Do not use if any structural defects are present. If signs of wear, weakness, or damage are detected, replace the product immediately. Failure to maintain or replace worn components may result in sudden component failure and loss of bicycle control, leading to potential injury or accidents.

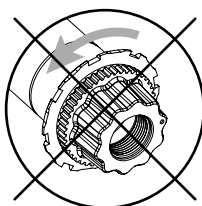


Do not disassemble.

No desmontar.
Ne pas démonter.
Nicht zerlegen.
Non smontare.
请勿拆卸。

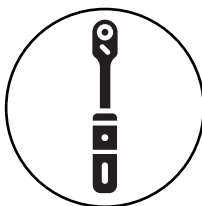

Use torque wrench to install.


Use una llave dinamométrica para instalar.
Utilisez une clé dynamométrique pour l'installation.
Verwenden Sie zum Installieren einen Drehmomentschlüssel.
Utilizzare una chiave dinamometrica per l'installazione.
安装时请使用扭力扳手。

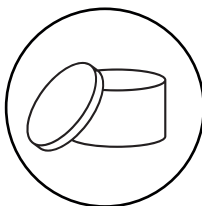

Use assembly paste.

Use pasta de montaje.
Utilisez de la pâte de montage.
Verwenden Sie Montagepaste.
Utilizzare pasta di montaggio.
使用装配膏。

ASSEMBLY TOOLS



ASSEMBLY
PASTE







1.5mm




8mm

PARTS

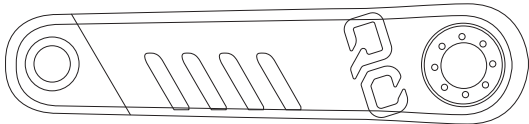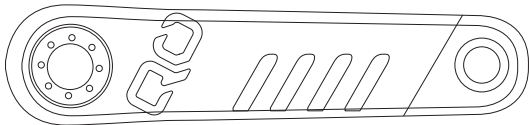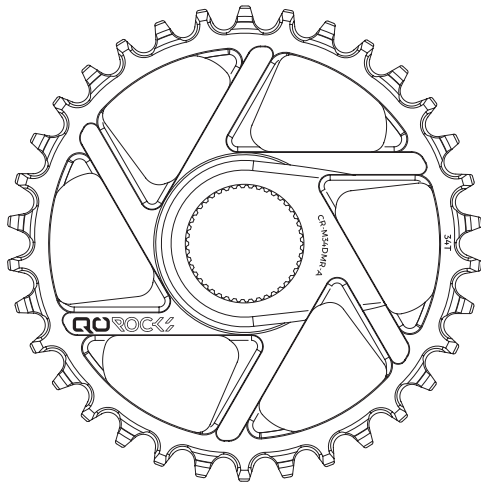


STEP BY STEP INSTALLATION


1

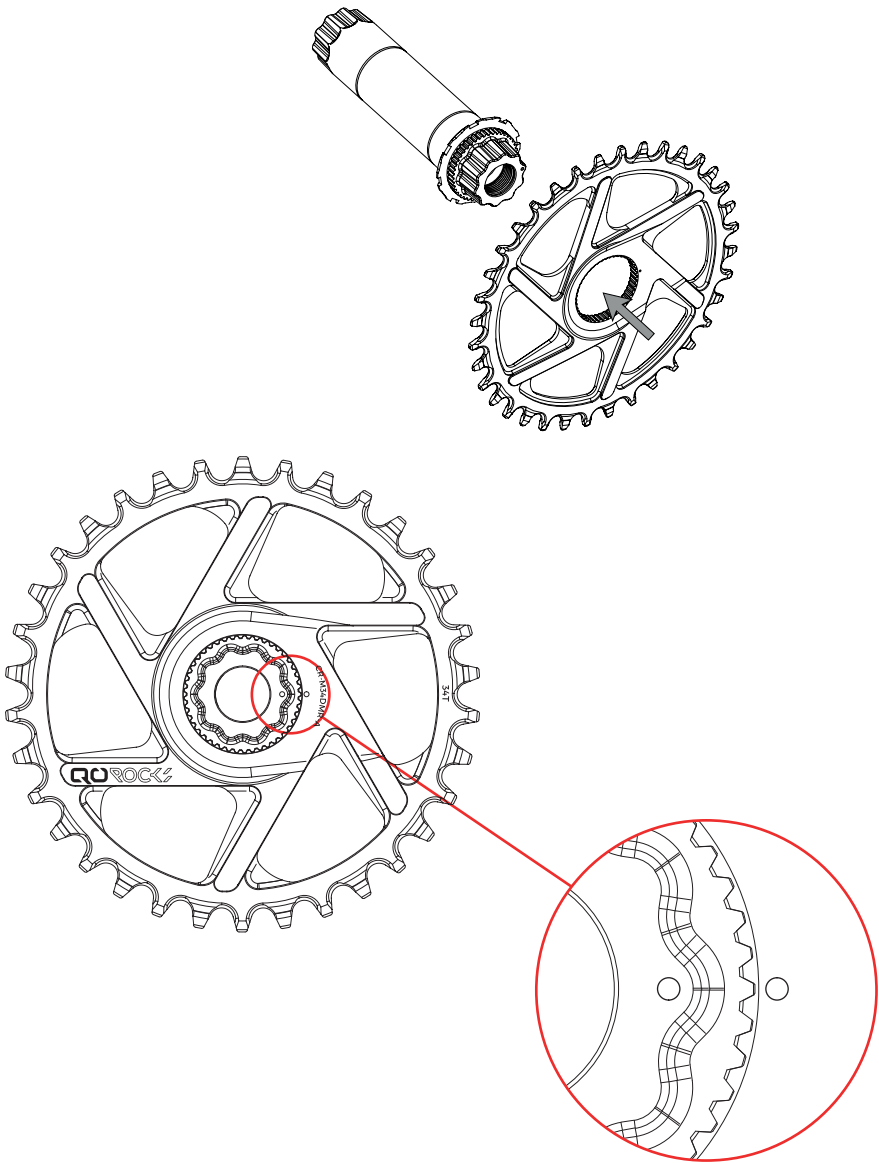


2

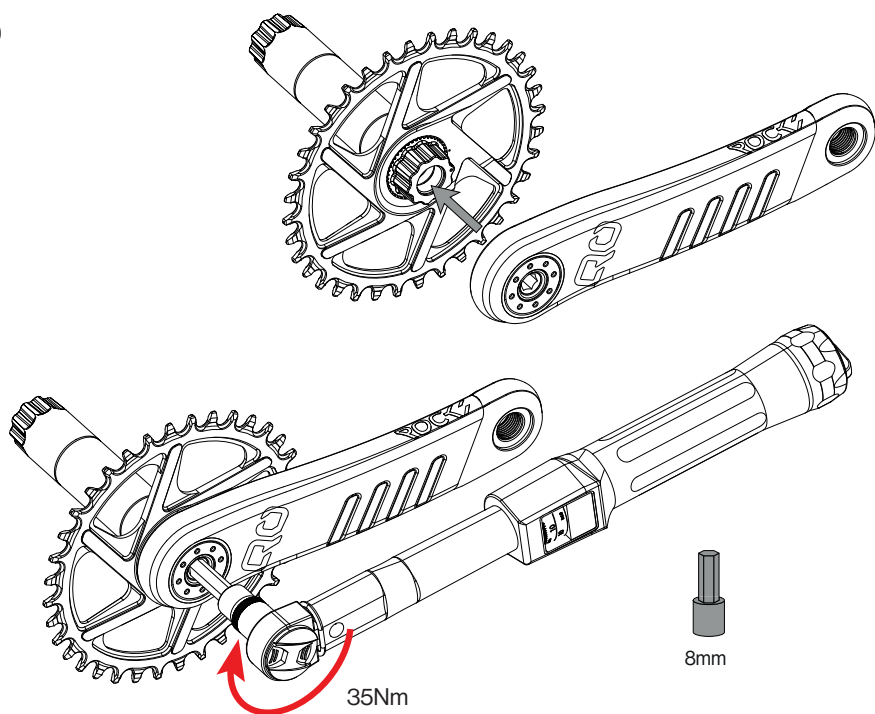

3

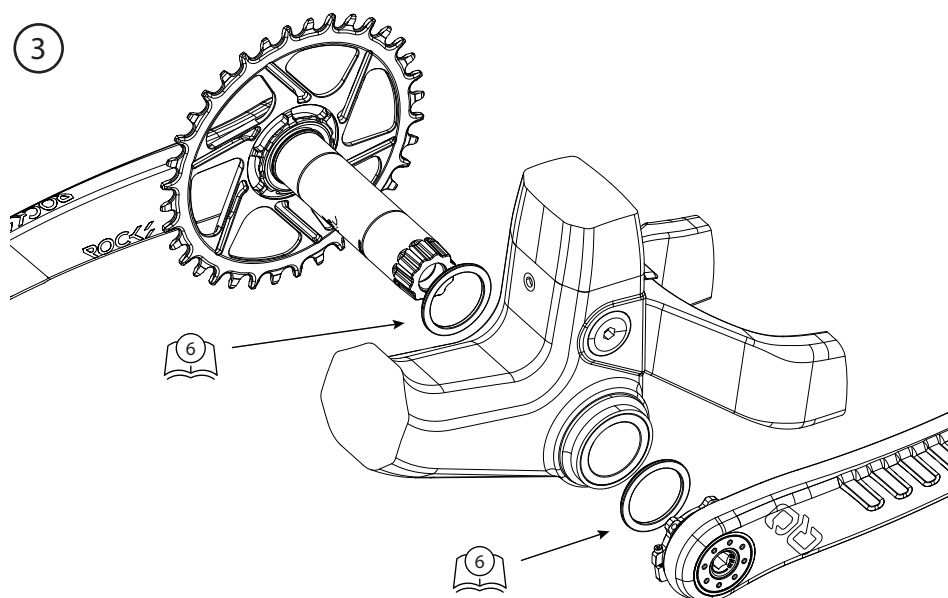

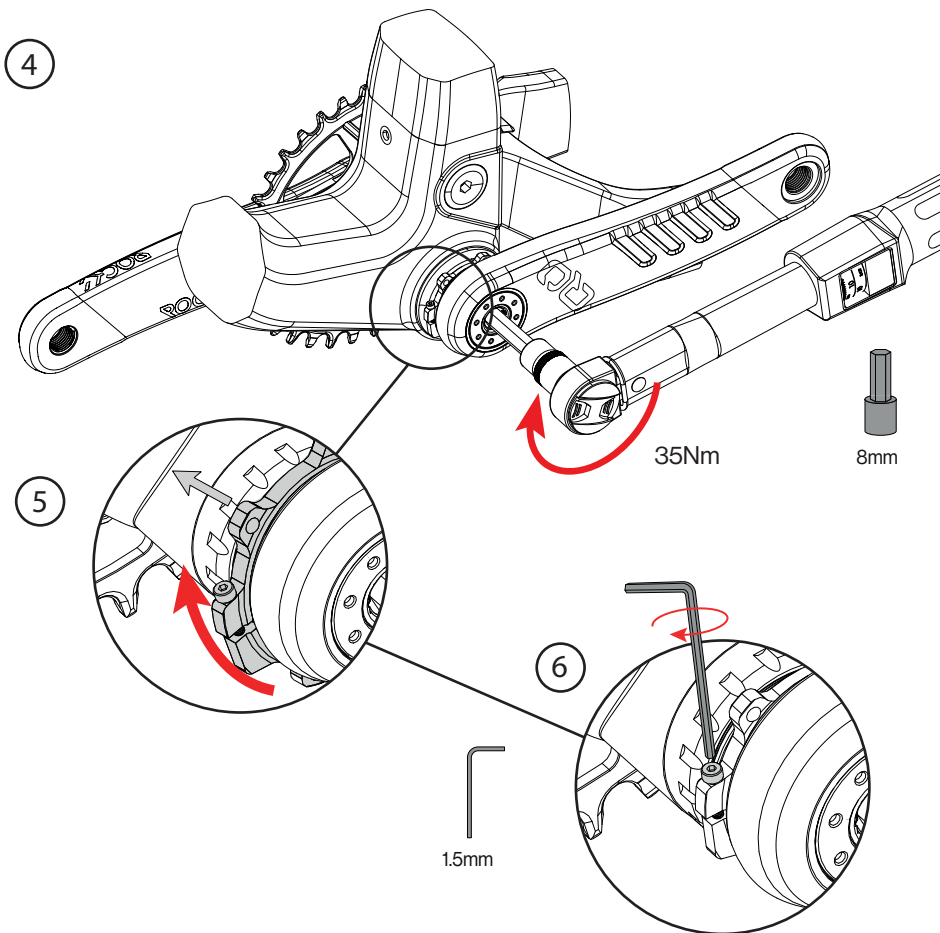

SPACERS NEEDED

Spacers may vary depending on the bottom bracket used.

SRAM DUB® BBs

Frame	Frame Diameter	Frame Width	BB Recommendation	Left Side Spacer	Right Side Spacer
BSA 73	Thread 1.37"x24TPI	73 mm	SRAM® DUB BSA 68/73	4.5 mm	2 mm
PressFit 89.5	41 mm	89.5 mm	SRAM® DUB PressFit 89.5/92	4.5 mm	2.5 mm
PressFit 92	41 mm	92 mm	SRAM® DUB PressFit 89.5/92	4.5 mm	-
BB30 73	42 mm	73 mm	SRAM DUB BB30 68/73	3 mm	2 mm
PressFit 30 73	46 mm	73 mm	SRAM DUB PressFit 30 68/73	3 mm	2 mm
PressFit 30 79-A	46 mm	79 mm	SRAM DUB PressFit 30 79-A	4.5 mm	4.5 mm
T47 73	Thread 47x1.0 mm	73 mm	SRAM DUB T47 68/73	4.5 mm	2 mm
T47 92	Thread 47x1.0 mm	92 mm	SRAM DUB T47 85.5/83/92	2.5 mm	2 mm

QO